

TUBULAR HEATER INSTRUCTION MANUAL

Picture	Model	Function	
	1102150 1102152 1102154	basic model, with thermal cut off.	
	1102140 1102141 1102142 1102143	with power indicator, with adjustable thermostat, with thermal cut off.	

YOU SHOULD READ THE MANUAL CAREFULLY BEFORE USING, AND KKEP THE MANUAL WELL.

1. Safety Regulations

- During the first use the heater may emit a small amount of vapour which is perfectly normal. The reason for this is the heating wire element is coated with some lubricant oil during the production process. This will stop after approx. 5 minutes after the first use and is not a safety concern.
- It is important all electrical devices are plugged into power that is protected by a safety switch.
- The tubular heater is not suitable for use outdoors in damp weather.
- Do not submerge into water.
- Place in a safe place away from flammable objects.
- Do not place flammable liquids or gasses near the heater.
- Do not place the heater directly below the socket outlet.
- Do not let the power cord over hang or touch the tube.
- Keep out of reach of children and animals product gets hot to touch.
- · This is not a toy.
- · Switch off appliance when not in use.
- Do not hold the tubular heater by the cord.
- If using an extension cord it must be as short as possible and fully extended.
- Check heater regularly if using with a timer or any other device that switches the tubular heater on or off automatically.

2. Cleaning

Ensure product is unplugged from the mains. Ensure product is completely cold.

Wipe with a damp cloth, then finish by drying with a soft cloth.

DO NOT use abrasive cleaning powders, clothes or metal polishes on any part of the tubular heater as this will cause damage.

3. Thermal Cut-out

The appliance is fitted with a thermal cut-out.

Once the tubular heater has cooled down it will re-set itself automatically.


It will then switch on and off until the reason for overheating has been removed.

4. Operation


Please install horizontally, prohibited vertically.

Operation for tubular heater TH01A series, TH01B series

Notice: DO NOT SWITCH POWER ON TO THE HEATER UNTIL IT IS SECURELY MOUNTED.

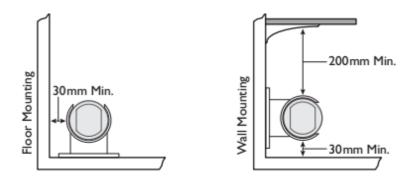

Step 1. Install the bracket as the picture showed .

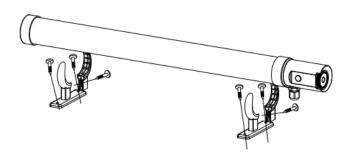

Step 2. Fix the tubular heater on the wall or on the floor like the following picture showed .



5. Tubular Heater Notice:

- The heater is fitted with a safety device which will switch off the heater in case of accidental overheating.
- Make sure that any causes of overheating, such as obstructions are removed and plug the appliance in again.
- Please turn off the power when nobody at home or no need to keep heating, it is energy saving and safer.

6. Tubular heater Specifications

Model No.	Power	Electrical Supply	Product Size (±5mm)
1015640	45W	220-240V~ 50 Hz	310*100*80
1015641	80W	220-240V~ 50 Hz	610*100*80
1015642	130W	220-240V~ 50 Hz	910*100*80
1015665	60W	220-240V~ 50 Hz	340*100*80
1015666	120W	220-240V~ 50 Hz	640*100*80
1015667	180W	220-240V~ 50 Hz	950*100*80
1015668	240W	220-240V~ 50 Hz	1250*100*80

7. Disposal



This symbol indicates that this product must not be placed in general household waste. It should be sent to a separate recycling facility for recovery, check Local Authorities for details.

By responsible recycling and separating this product from other household waste it will help protect the environment and human health, as the volume of waste sent to incinerators or land-fills will be reduced and natural resources conserved.

Importør: FLAK AS Skibåsen 37 4636 Kristiansand www.flak.no

Importør:
Palby Marine A/S
Korsvej 3
6000 Kolding
www.palby.dk

