




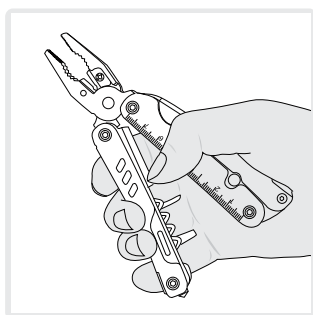

1 Tang

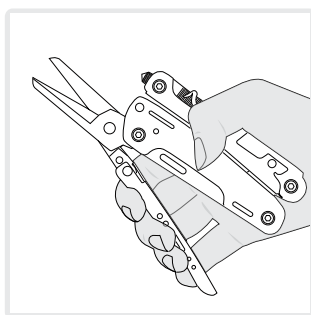

2 Kraftig stor saks

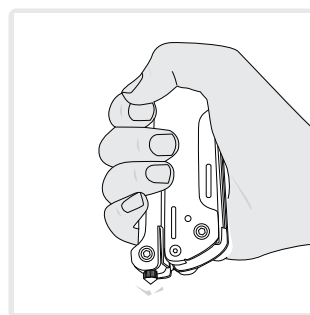


3 Glasknuser/-
glass knuser


1 Brug af tang Bruk av tang




Front

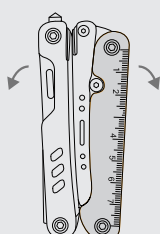


Bagside
Baksiden

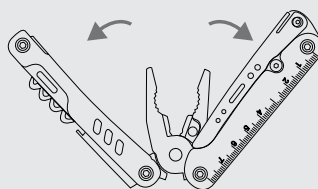



► Åbning af tang
Åpning av tang

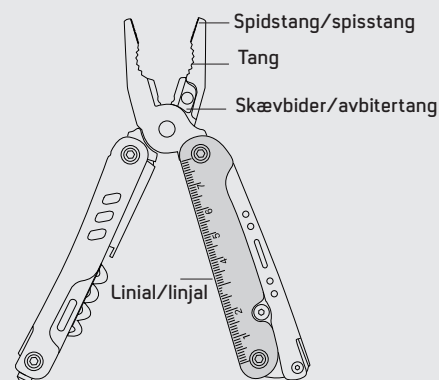


2 Brug af saks Bruk av saks

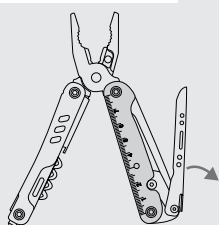


1 Åbning af saks
Åpning av saks

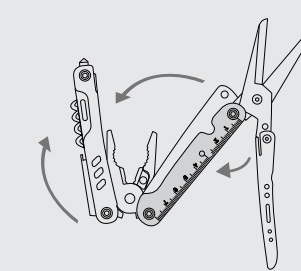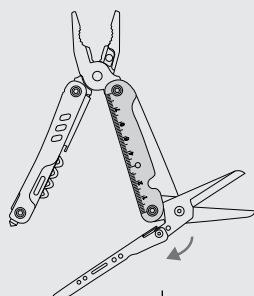


2 Luk tanghåndtaget
Lukk tanghåndtaget

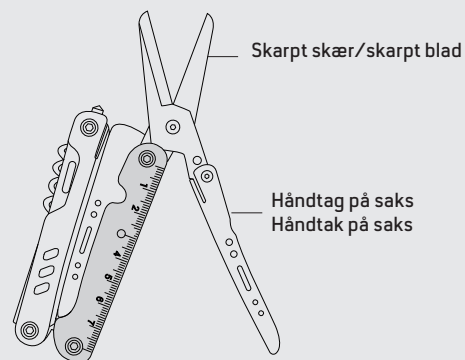



3 Luk saks og brug glasknuseren Lukk saksen og bruk glassknuseren

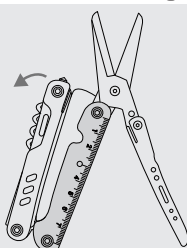


1 Åben tanghåndtaget
Åpne tanghåndtaget

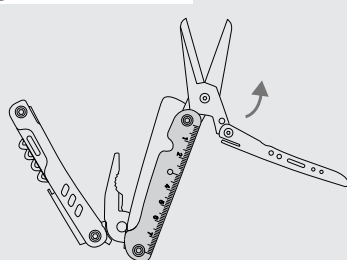



2 Luk saks
Lukk saks

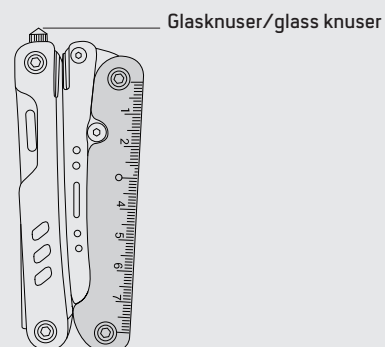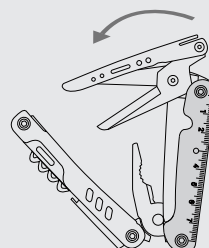


► Andre funktioner Andre funksjoner

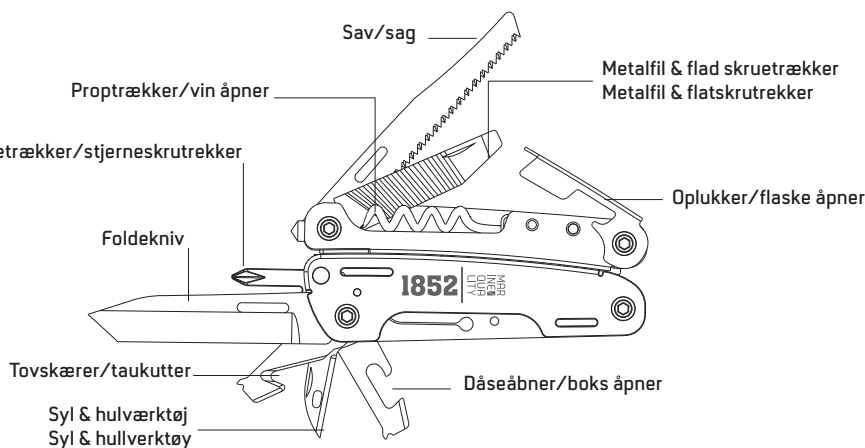


4 ► Brug foldekniv Bruk foldekniv

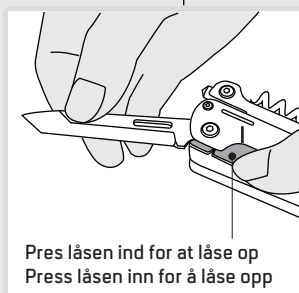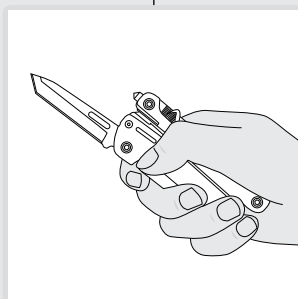




5 ► Proptrækker Vin åpner

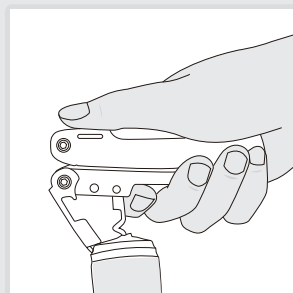

6 ► Ekstra funktioner Ekstra funksjoner

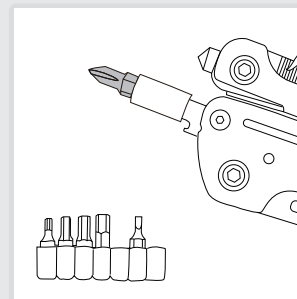

► Brug af andre funktioner Bruk av andre funksjoner

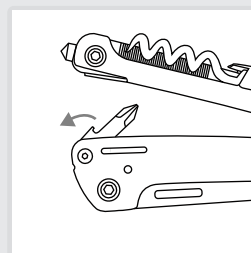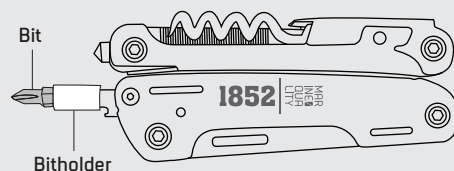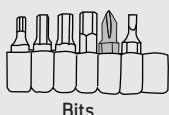

Åbning
Åpning



Pres låsen ind for at låse op
Press låsen inn for å låse opp

Lukning
Lukking

Operation & maintenance

keeping your multi-tool clean and fully dry, especially after use. When necessary, rinse the tool in fresh water, or with a mild solution of diluted soap and water, and completely dry the tool with a soft cotton cloth. Apply a light coat of water-displacing oil (such as WD-40 or 3-In-1) or other desiccant (a drying agent), and then wipe down and lightly lubricate the tool's surface and pivot points. (Avoid harsh detergents such as laundry or dish soap, and chlorine products). It is best not to immerse your folding tool in water.



CAUTION!

Keep working part of the tool away from hands and body. Sharpening, cutting, shearing etc functions of our tools are capable of causing serious injury. Keep away from children.