

Radio Controls and Indicators

Batteries and Charging

Pull Latch Up

Insert Batteries

Antenna



Press and hold to communicate with others. With the microphone about five cm (2 inches) from your mouth, speak in a normal voice.

Release the Talk button when you are finished talking and listen for a response. You cannot receive incoming calls while pressing the Talk button

NOTE Both radios must be tuned to the same channel to communicate.



Call Button

Press and release to alert others that you are calling.



TWO-WAY RADIO MODEL AM255

814-AM2551-101

Wrist Strap @ Connection Belt Clip 6 Battery **Battery Door Latch** Compartment

NOTE: Excessive sound pressure from earphones and headphones can cause hearing loss.

Batteries To install or replace batteries: Remove Belt Clip

1. Remove belt clip by releasing belt clip latch and sliding clip up. 2. Pull up on the battery door latch to

- remove the battery compartment cover. 3. Insert the supplied three AAA recharge able batteries (also works with nonrechargeable alkaline batteries). Position batteries according to polarity markings.
- 4. Replace battery compartment cover and belt clip.
- . Do not attempt to charge alkaline batteries.
 - · Do not mix old and new batteries.
 - . Do not mix alkaline, standard (carbonzinc), or rechargeable (Ni-Cd, Ni-MH,
 - etc.) batteries. . The radio is not intended to be used while being charged.

Maximum/Minimum Operating Range: -20°C to +45°C.

Caution – Risk of fire or explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions

Use only the supplied rechargeable batteries and charger for recharging vour Cobra microTALK® radio

Maximum SAR values: 0.223W/kg

Frequency Band: 446.00625-446.19375 MHz

Average and maximum radio-frequency power: 163.3mW

Batteries manufactured by:

SHENZHEN FBTECH CO.,LTD. Part No. AAAJ300 /

Huizhou Shenzhou Super Power Technology Co., Ltd., Part No. AAA300

Cover





LCD Display

þ

Trademark, Warranty & Customer Service

Channel Number

While in **Standby** mode or when selecting a channel, shows current channel (1 through 16).

When adjusting the volume, shows current level (1 through 8).



Receive Icon

Visible when receiving a message.

Transmit Icon

Visible when transmitting a message.

Battery Low Icon

Blinks when battery power level is low.

Your microTALK® radio has a unique circuit designed to extend battery life. If there are no transmissions within 10 seconds, the radio

will automatically switch to **Battery Save** mode. This will not affect the radio's ability to receive incoming transmissions.

Channel/Volume Indicator

"CH" is visible when in **Standby** mode or when selecting a channel.

"LE" is visible when adjusting volume.

Trademark

CEEL™ is a registered trademark of Cobra Electronics Europe, Ltd.

Cobra and the snake design are proprietary trademarks of Cobra Electronics Corporation, USA. Other trademarks and trade names are those of their respective owners.

Warranty & Customer Service

For warranty and customer service information, please contact your dealer. For use in EU countries, subject to local laws and regulations.

Disposal of Old Electrical or Electronic Equipment

This product may contain hazardous substances that impact health and the environment if not disposed of properly.



The crossed out wheeled bin symbol indicates that the product should not be disposed along with household waste. It should handed over to an applicable collection point for the recycling of electrical equipment. By ensuring that this product is disposed of correctly you will help/prevent potential negative immact on the environment.

If you need more information on the collection, reuse and recycling systems, please contact your local civic office or the shop where it was originally purchased.





©2023 Cobra Electronics Europe Ltd. www.eu.cobra.com