

Repair instruction

Description: SPP Level indicator Qube and Excellence

Part number: 92909-.. / 92908-.. / 92410-..

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	March 2012
Tools required:	Flat screwdriver



A

Place carefully a flat screwdriver underneath the cover, lift it up and push with you're thumb the cover forwards.



B

Dial with maget can be taken out.



Place new level indicator in reverse steps.

Repair instruction

Description: SPP Piston Pump Excellence/Qube
Part number: 92401-66/111/130, 92901-66/111/130
Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	March 2012
Tools required:	Flat screwdriver

A

Remove seat & cover



B

Place carefully flat screwdriver under pump housing and lift it up.



C

Pull flush tube off and place new pump in reverse steps.



Repair instruction

Description: SPP Lip seal

Part number: 07101


Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	January 2012
Tools required:	Nose plier



A

Push the handle in to open the waste holding tank.

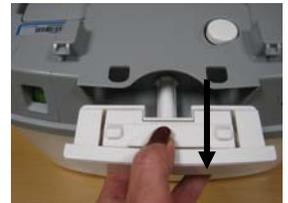

B

Pull the lip seal out of the inside groove with help of the nose plier.



C

Push the new lip seal into the inside groove.



D

When lip seal is on its place, close the handle.



Repair instruction

Description: SPP Pour out Spout Qube and Excellence


Part number: 92907-.. / 92408-..

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	January 2012
Tools required:	

A

Turn the pour out spout and pull it out.

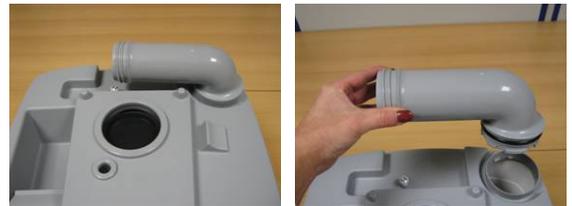

B

Press new pour out spout in and turn it back in position.



Repair instruction

Description: SPP Vent button

Part number: 92407-111

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version: 1


Date: January 2012

Tools required:



A

Push the handle in to open the waste holding tank.

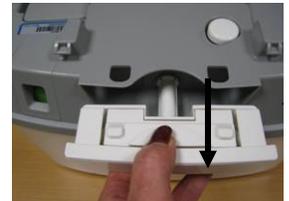

B

Press the vent button in and pull on the inside of the waste holding tank the vent button seal loose.



C

Place new vent button seal and press new vent button onto the seal



Repair instruction

Description: SPP Vent seal


Part number: 07102

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	1
Date:	January 2012
Tools required:	Nose plier


A

Push the handle in, to open the waste holding tank.

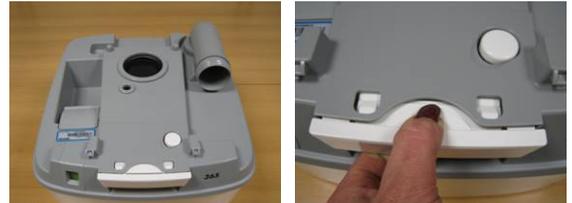

B

Push the vent seal loose of the inside groove and pull it out with help of the nose plier.

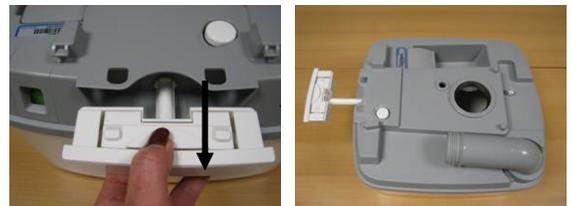

C

By squeezing the new vent seal, it can be pushed through the hole.



D

Hold vent seal in position with the nose plier while closing the handle slowly. This will press the vent seal back in its groove.

