

Owner's Manual and Operating Instructions

Stainless Steel Gas Single Burner Stove

Model: FH-3840SET

Read all warnings and operating instructions before use and retain for future reference.



1. Read the instructions before using the appliance.
2. Only to be used outdoors.
3. Do not move the appliance during use.
4. Turn off the gas supply at the gas container after use.
5. Do not put on the appliance a load exceeding 50 kg.
6. Any modification of the appliance may be dangerous.

※Instructions:

❶ GAS LEAK TESTING:


Step 1: Slowly open propane tank valve and check for leaks by applying small amount of liquid soap and looking for bubbles to appear. If you smell gas, TURN OFF the gas supply immediately.

Step 2: To prevent the first time without tightening, please reconnect regulator on tank and test it again, if still gas leaking, please stop using and contact retailer/distributor for help

Step 3: If no gas leak, please follow part ❷ operation.

INSTALLATION

1. The type of gas cylinder is 13kg of butane/propane gas, it should be in well ventilation space.
2. The regulator must comply with the requirement of EN 16129 and local code. It is suitable to use a 28-30mbar regulator for gas category I3B/P(30) and I3+(28-30/37), a 37mbar regulator for gas category I3B/P(37), and a 50mbar regulator for gas category I3B/P(50).
3. The hose must comply with EN 16436 or the relevant standard for the country use, and the length of hose shall not exceed 1.5m. The gas hose should be checked periodically and should be replaced at least every two years. Worn or damaged hose must be replaced immediately.
4. The hose should not be twisted or kinked when attached to the gas cylinder. Ensure that it is not subjected to twisting.
5. It is necessary of not obstructing the ventilation openings.
6. This appliance shall be kept away from flammable materials.
7. When changing the gas cylinder shall be carried out away from any source of ignition.

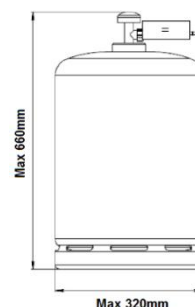

❷ OPERATION:

1. Open gas tank valve.
2. Use a long match or spark igniter until the burner lights.
3. Some yellow tipping of the flame is normal.
4. If burner doesn't light, turn the knob OFF, wait 5 minutes and repeat the lighting.

❸ ATTENTION:

Notice 1: The gas tank should be at least 1.0M away from gas stove during use.

Notice 2: Do not move the gas stove or propane tank during use.

Notice 3: It is normal that the burner outlets will change to a light gray/white color after heating.

Notice 4: After use, let it cool for at least 20 minutes before disassembling, storage, transport, cleaning.

Notice 5: It is recommended that using protective gloves when handling particularly hot components.

Notice 6: Use a soft brush and compressed air to remove blockages in the Venturi tube and burner fire holes.

Notice 7: It is recommended to use aluminum pot, the maximum container diameter is 36cm, the minimum container diameter is 20cm.

④ CLEANING AND MAINTENANCE:

- 1: Allow burners and steel grate to cool completely.
- 2: Turn valve on propane tank to the OFF position.
- 3: Remove propane hose from tank and stove.
- 4: Stove may be wiped down with soap and warm water.
- 5: Allow stove to dry thoroughly before storage.
- 6: Never store stove with propane hose attached.
- 7: It is recommended cleaning and maintenance after each normal use.

⑤ STORAGE:

- 1: DO NOT leave propane tank attached to stove during storage or transport.
- 2: Wipe the burners, steel cooking grate, and propane hose before storing.
- 3: It is suggested to store stove and hose in a nylon storage bag to keep it clean.

⑥ SERVICE AND REPAIR:

This product is a sealed unit and is not designed for repair by the customer. Do not attempt to service the stove or hose and regulator assembly in the field.

⑦ CAUTION:

- * DO NOT attempt to connect your camp stove to a natural gas supply. Use only with the hose and regulator supplied with the stove and an approved bulk propane tank.
- * DO NOT use under overhead construction. Minimum distance from sides and back of unit to walls or railing is 24 inches(610mm).
- * If you smell gas, shut off gas to the appliance at the tank, extinguish any open flame. If odor continues, keep away from the appliance and immediately and call your fire department.
- * If a fire occur, keep away from the appliance and immediately call your fire department. **DO NOT ATTEMPT TO EXTINGUISH AN OIL/GREASE FIRE WITH WATER.**
- * Failure to follow this caution statement could result in fire, explosion or burn hazard that could cause property damage, personal injury or death.
- * The instruction manual contains important information necessary for the proper assembly and safe use of the appliance.
- * Read and follow all warnings and instructions before assembling and using the appliance.
- * Follow all warnings and instructions when using the appliance.

For Outdoor Use Only

IF STORED INDOORS, DETACH AND LEAVE CYLINDER OUTDOORS.

THIS APPLIANCE IS NOT FOR FRYING.

Gasskomfyr i rustfritt stål med én brenner

Modell: FH-3840SET

Les alle advarsler og bruksanvisninger før bruk, og ta vare på dem for senere referanse.



WARNING



1. Les instruksjonene før du bruker apparatet.
2. Kun til bruk utendørs.
3. Ikke flytt apparatet under bruk.
4. Slå av gasstilførselen ved gassbeholderen etter bruk.
5. Ikke legg mer enn 50 kg på apparatet.
6. Enhver modifikasjon av apparatet kan være farlig.


※Instruksjoner:

❶ GASSLEKKASJETESTING:

Trinn 1: Åpne sakte ventilen på propantanken og sjekk for lekkasjer ved å påføre en liten mengde flytende såpe og se etter bobler. Hvis du lukter gass, **SLÅ AV** gasstilførselen umiddelbart.

Trinn 2: For å forhindre at den ikke strammes til første gang, koble regulatoren til tanken igjen og test den på nytt. Hvis det fortsatt lekker gass, må du slutte å bruke den og kontakte forhandler/distributør for hjelp.

Trinn 3: Hvis det ikke er noen gasslekkasje, følg del ❷ operasjon.

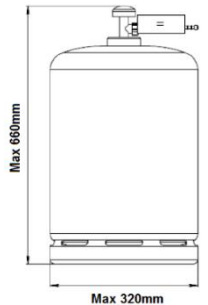

INSTALLASJON

1. Gassflasken er av typen 13 kg butan/propangass, og den bør plasseres i et godt ventilert rom.
2. Regulatoren må overholde kravene i EN 16129 og lokale forskrifter. Det er egnet å bruke en 28–30 mbar regulator for gasskategori I3B/P(30) og I3+(28–30/37), en 37 mbar regulator for gasskategori I3B/P(37) og en 50 mbar regulator for gasskategori I3B/P(50).
3. Slangen må være i samsvar med EN 16436 eller den relevante standarden for landets bruk, og slangens lengde skal ikke overstige 1,5 m. Gasslangen bør kontrolleres regelmessig og byttes ut minst annethvert år. Slitt eller skadet slange må byttes ut umiddelbart.
4. Slangen skal ikke være vridd eller bøyd når den er koblet til gassflasken. Sørg for at den ikke blir vridd..
5. Det er nødvendig å ikke blokkere ventilasjonsåpningene.
6. Dette apparatet skal holdes unna brennbare materialer.
7. Ved bytte av gassflaske skal det gjøres unna enhver tennkilde..

❷ OPERASJON:

1. Åpne ventilen på bensintanken.
2. Bruk en lang fyrstikk eller gnisttenner til brenneren tenner.
3. Det er normalt at flammen blir litt gulaktig.
4. Hvis brenneren ikke tenner, slå AV bryteren, vent i 5 minutter og gjenta tenningen.

❸ OPPMERKSOMHET:

Merknad 1: Bensintanken skal være minst 1,0 m unna gasskomfyren under bruk.

Merknad 2: Ikke flytt gasskomfyren eller propantanken under bruk.

Merknad 3: Det er normalt at brennerutgangene endrer farge til lys grå/hvit etter oppvarming.

Merknad 4: La den avkjøles i minst 20 minutter etter bruk før demontering, lagring, transport eller rengjøring.

Merknad 5: Det anbefales å bruke vernehansker ved håndtering av spesielt varme komponenter.

Merknad 6: Bruk en myk børste og trykkluft for å fjerne blokkeringer i venturirøret og brennerens ildhull.

Merknad 7: Det anbefales å bruke aluminiumsgryte. Maksimal beholderdiameter er 36 cm, og minimum beholderdiameter er 20 cm.

④ RENGJØRING OG VEDLIKEHOLD:

- 1: La brennerne og stålisten avkjøles helt.
- 2: Vri ventilen på propantanken til AV-posisjon.
- 3: Fjern propanslangen fra tanken og komfyren.
- 4: Komfyren kan tørkes av med såpe og varmt vann.
- 5: La ovnen tørke helt før oppbevaring.
- 6: Oppbevar aldri komfyren med propanslange festet.
- 7: Det anbefales rengjøring og vedlikehold etter hver normal bruk.

⑤ LAGRING:

- 1: IKKE la propantanken være festet til komfyren under oppbevaring eller transport.
- 2: Tørk av brennerne, stålistene og propanslangen før oppbevaring.
- 3: Det anbefales å oppbevare komfyren og slangen i en nylonpose for å holde den ren.

⑥ SERVICE OG REPARASJON:

Dette produktet er en forseglet enhet og er ikke beregnet for reparasjon av kunden. Ikke forsøk å utføre service på komfyren eller slangen og regulatorenheten ute i felten.

⑦ FORSIKTIGHET:

- * IKKE forsøk å koble campingovnen til en naturgassforsyning. Bruk kun med slangen og regulatoren som følger med ovnen og en godkjent propantank i bulk.
- * IKKE bruk under takkonstruksjon. Minimumsavstand fra sidene og baksiden av enheten til vegg eller rekkverk er 610 mm (24 tommer).
- * Hvis du lukter gass, steng av gassen til apparatet ved tanken, og slukk eventuell åpen flamme. Hvis lukten vedvarer, hold deg unna apparatet og ring brannvesenet umiddelbart.
- * Hvis det oppstår brann, hold deg unna apparatet og ring brannvesenet umiddelbart. **IKKE FORSØK Å SLUKKE EN OLJE-/FETTBRANN MED VANN.**
- * Unnlatelse av å følge denne advarselen kan føre til brann-, eksplosjons- eller brannfare som kan forårsake materielle skader, personskade eller død.
- * Bruksanvisningen inneholder viktig informasjon som er nødvendig for riktig montering og sikker bruk av apparatet.
- * Les og følg alle advarsler og instruksjoner før du monterer og bruker apparatet.
- * Følg alle advarsler og instruksjoner når du bruker apparatet.


Kun for utendørs bruk

HVIS OPPBEVARET INNENDØRS, RIV AV OG LA GYLINDEREN STÅ UTENDØRS.


DETTE APPARATET ER IKKE FOR STEKEKOKERI.

ASSEMBLY STEPS

MONTERING TRINN

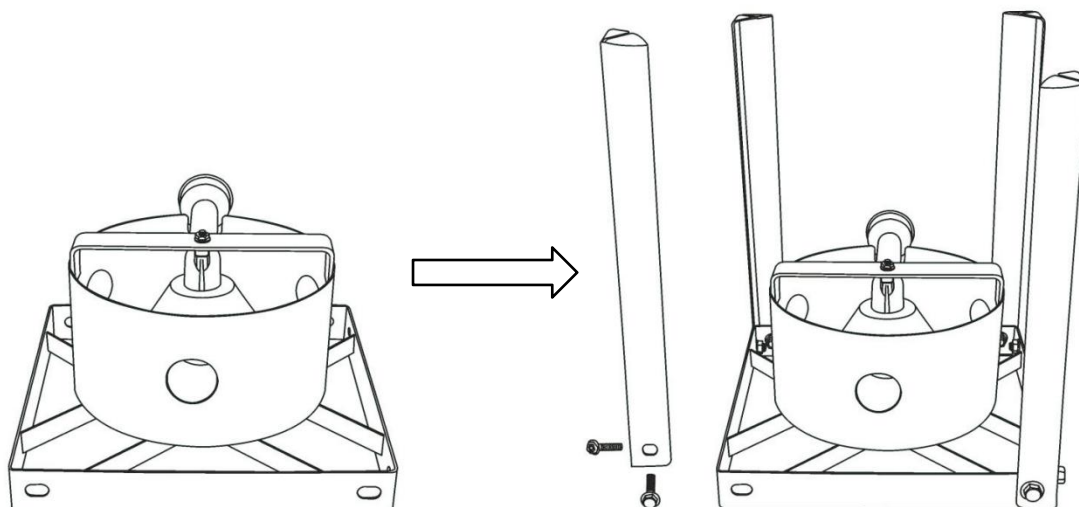


Step 1: Attach burner legs and secure with hexagonal screws.
Trinn 1: Fest brennerbena og fest dem med sekskantskruer.

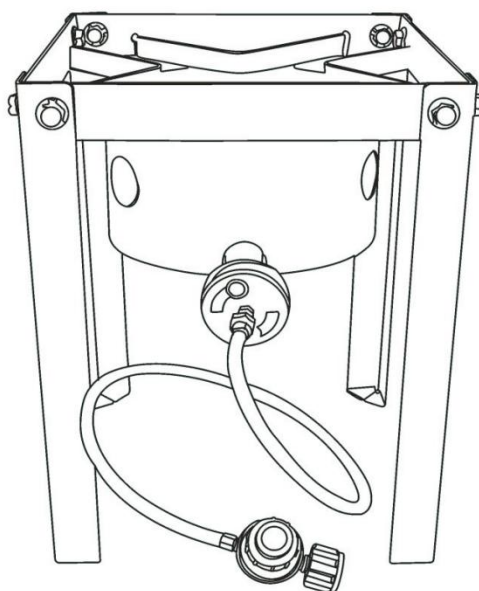

Step 2: Connecting gas hose to the Burner.
Trinn 2: Koble gasslangen til brenneren.

ASSEMBLY INSTRUCTION

MONTERINGSANVISNING

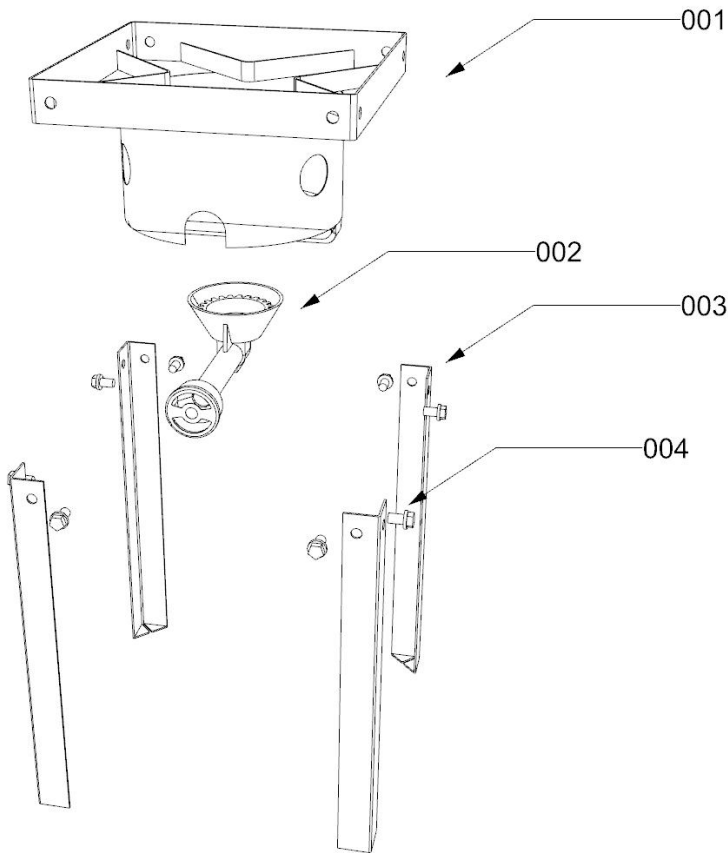

No.	Assembly Name <i>Samplingsnavn</i>	QTY
001	Wind Guard <i>Vindbeskyttelse</i>	1 PC
002	Burner <i>Brenner</i>	1 PC
003	Holder <i>Holder</i>	1 PC
004	Nut & Screw <i>Mutter og skrue</i>	1 PC

Technical data

Product name	Outdoor Gas Stove			
Model	FH-3840SET			
Heat input (kW)	3.8 (277g/h for G30, 272g/h for G31)			
Gas type	Butane/ Propane	Butane, propane or their mixtures		
Gas category	I ₃ +(28-30/37)	I _{3B} /P(30)	I _{3B} /P(37)	I _{3B} /P(50)
Gas pressure (mbar)	28-30 for butane 37 for propane	28-30	37	50
Injector size (mm)	1.00	1.00	0.90	0.82
Destination country	BE, FR, IT, LU, IE, GB, GR, PT, ES, CY, CZ, LT, CH, SI, LV, TR	LU, NL, DK, FI, SE, CY, CZ, EE, LT, MT, SK, SI, BG, IS, NO, HR, RO, IT, HU, LV, GR	PL	DE, AT, CH, SK

WARNING:

- a) Use outdoors only.
- b) Read the instructions before using the appliance.

